


Trace Oxygen Gas Measurement CO₂ Purity Control for Increased Beer Quality




Control of residual oxygen in CO₂

The CO₂ purity is crucial for the beer quality and shelf life. The InPro 6950 provides accurate online monitoring of residual oxygen in the brewer's CO₂ network as well as after the CO₂ recovery step.

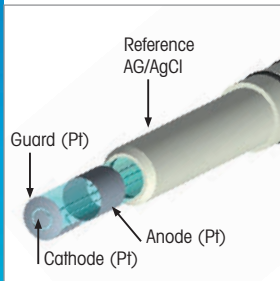

Innovative 4-electrode technology

The built-in 4-electrode technology provides advanced signal stability and helps to reduce maintenance efforts by avoiding formation of silver chloride in the electrolyte.

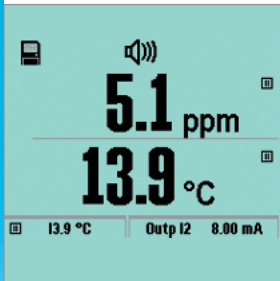

Oxygen measurement to the lowest limit

The guard of the 4-electrode technology acts as a protection of the oxygen measuring system from interferences. This leads to most accurate oxygen determination down to trace level.



Maintenance in seconds

The quickly replaceable membranes and "Quick Disconnect" interior body reduces maintenance, saves time and provides maximum availability.



InPro 6950 – The ideal solution for lowest oxygen measuring applications

The innovative 4-electrode measurement system of the InPro 6950 combines highest performance with easy handling and reduced maintenance.


The InPro 6950 cathode / guard electrode design, optimized for accurate and reliable trace oxygen measurement, ensures a detection limit of 5 vol-ppm (0.0005% O₂).

The reference/anode assembly opens new design possibilities where no silver chloride is released into the electrolyte, thereby improving the signal stability and powering maintenance effort.

The modular design of the InPro 6950 simplifies maintenance by enabling the user to perform routine operations on-site which saves both time and cost.

Technical data InPro 6950

Designation	InPro 6950
Operating range	5 ppm to 50,000 ppm
Accuracy	± [1% + 5 ppm]
Response time at 25°C	T _{98%} < 60 s (5,000 → 10,000 ppm)
Sensor signal in ambient air at 25°C	2500 to 6000 nA
Residual signal in oxygen free medium at 25°C	< 0.025% of signal in air
Permissible temperature range during measurement	0 ... 70 °C (32 ... 158 °F)
Mechanical	-5 ... 121 °C (23 ... 250 °F) / Steam sterilizable
Permissible pressure range during measurement	0.2 ... 9 bar absolute (2.9 to 130 psi absolute)
Mechanical pressure resistance	Max. 12 bar absolute (max. 174 psi absolute)
Plug head	VP (IP 68), PG 13.5 Thread
Shaft diameter	12 mm
Lengths	70 mm, 120 mm, 220 mm, 320 mm
Temperature compensation	Automatic with built-in RTD
Wetted O-ring material	Silicone FDA & USP Class VI approved
Wetted sensor parts	Stainless steel 1.4404, [AISI 316L]
Surface roughness	Ra < 0.4 µm [16 µin]
O ₂ selective membrane material	Silicone/Teflon FDA compliant

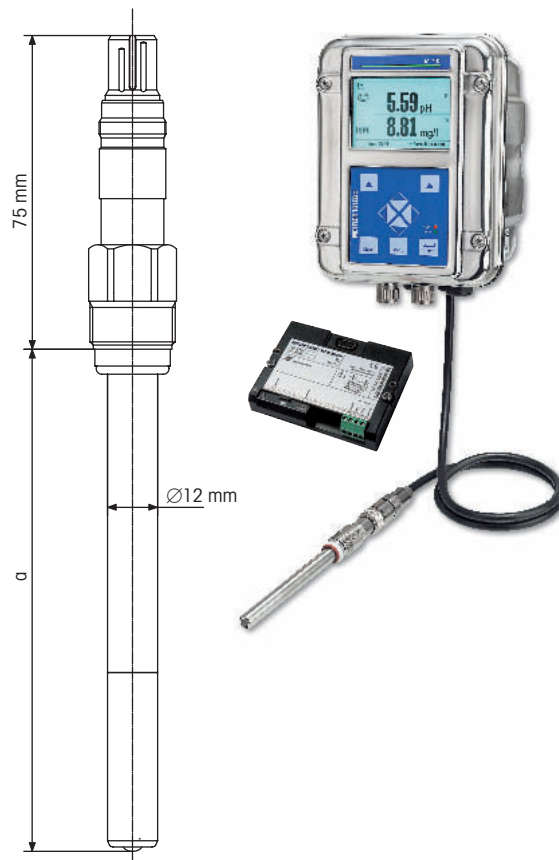

Get online support
via www.mt.com/pro

Visit our website at any time for fast and competent information.
The very latest, updated product and support documentation is available in many different languages.



- Support center with easy and free download
- Country-specific information
- Search functionality
- For online access click on
 - Contact us
 - Request more information
 - Get a quote
- Find and download product and application documents

www.mt.com/pro

Visit for more information

Visit our website for fast and competent information.

Sales and service:



Management System certified according to ISO 9001 / ISO 14001

Mettler-Toledo AG
Process Analytics
CH - 8902 Urdorf, Switzerland
Phone +41 44 729 62 11
Fax +41 44 729 66 36

Subject to technical changes.
© 01/2007 Mettler-Toledo AG.
Printed in Switzerland. 52 206 136